## SONY

# Cyber-shot

Digital Still Camera/Cámara fotografía digital
Instruction Manual
Manual de instrucciones
DSC-W300







For details on advanced operations, please read "Cyber-shot Handbook" (PDF) and "Cyber-shot Step-up Guide" on the CD-ROM (supplied) using a computer.

Para tener más información sobre las operaciones avanzadas, consulte la "Guía práctica de Cyber-shot" (PDF) y la "Guía avanzada de Cyber-shot" del CD-ROM (suministrado) utilizando un ordenador.

#### **Operating Instructions**

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

#### Manual de instrucciones

Antes de operar la unidad, lea este manual atentamente, y guárdelo para futuras referencias.

© 2008 Sony Corporation

3-300-515-62(1)

GB

FS

## English

#### Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. DSC-W300

Serial No.

#### WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

## For Customers in the U.S.A.





This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

Carefully observe all warnings, precautions and instructions on the appliance, or the one described in the operating instructions and adhere to them.

#### Use

#### Power Sources

This set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, or other sources, refer to the operating instructions.

#### Polarization

This set may be equipped with a polarized ac power cord plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.

## Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

## Object and Liquid Entry

Never push objects of any kind into the set through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

#### Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

#### **I** Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.

#### Installation

#### Water and Moisture

Do not use power-line operated sets near water – for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

#### Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

#### Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, or table. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer.

#### Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the set on a bed, sofa, rug, or other similar surface
- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.

#### Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power-line surges.

#### Service

#### Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or fraved.
- If liquid has been spilled or objects have fallen into the set.
- If the set has been exposed to rain or water.
- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.
- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.
- When the set exhibits a distinct change in performance – this indicates a need for service.

### Servicing

Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

## Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition

## Read this first

### **CAUTION**

Replace the battery with the specified type only. Otherwise, fire or injury may result.

Do not expose the batteries to excessive heat such as sunshine, fire or the like.

## For Customers in the U.S.A. and Canada

## RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.



For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit http://www.rbrc.org/

**Caution:** Do not handle damaged or leaking Lithium-Ion batteries.

## **Battery charger**

This power unit is intended to be correctly orientated in a vertical or floor mount position.

## For Customers in the U.S.A.

If you have any questions about this product, you may call:

Sony Customer Information Center

1-800-222-SONY (7669)

The number below is for the FCC related matters only.

#### Regulatory Information

#### **Declaration of Conformity**

Trade Name: SONY Model No.: DSC-W300

Responsible Party: Sony Electronics Inc.

Address: 16530 Via Esprillo,

San Diego, CA 92127U.S.A.

Telephone No.: 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules

# For the State of California, USA only

Perchlorate Material - special handling may apply, See

www.dtsc.ca.gov/hazardouswaste/perchlorate Perchlorate Material: Lithium battery contains perchlorate.

### For Customers in Europe

This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet).

#### Attention

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

#### Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

### Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely.

Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

## Notice for the customers in the countries applying EU Directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

## Notice for customers in the United Kingdom

A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i.e., marked with an ♠ or ♥ mark) must be used

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

## **Table of contents**

Read this first	
Notes on using the camera	
Getting started	9
Checking the accessories supplied  1 Preparing the battery pack	10 11
Shooting images easily	
Mode dial/Zoom/Flash/Macro/Self-timer/Display Shooting in Smile Shutter mode	
Viewing/deleting images	18
Learning the various functions – HOME/Menu	21
Using the HOME screen	21
HOME items	
Menu items	
Enjoying your computer	26
Supported Operating Systems for USB connection and application	
software (supplied)  Viewing "Cyber-shot Handbook"	
Indicators on the screen	
Battery life and memory capacity  Battery life and number of images you can record/view	
Recordable number of still images and recordable time of movies	
Troubleshooting	34
Battery pack and power	
Shooting still images/movies	
Viewing images	
Precautions	37
Specifications	38

## Notes on using the camera

## Internal memory and "Memory Stick Duo" back up

Do not turn off the camera, remove the battery pack, or remove the "Memory Stick Duo" while the access lamp is lit. Otherwise, the internal memory data or "Memory Stick Duo" may be damaged. Be sure to make a backup copy to protect your data.

### Notes on recording/playback

- Before you start recording, make a trial recording to make sure that the camera is working correctly.
- The camera is neither dust-proof, nor splashproof, nor water-proof. Read "Precautions" (page 37) before operating the camera.
- Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired.
- Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera.
- Do not use the camera near a location that generates strong radio waves or emits radiation.
   Otherwise, the camera may not properly record or play back images.
- Using the camera in sandy or dusty locations may cause malfunctions.
- If moisture condensation occurs, remove it before using the camera (page 37).
- Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. Furthermore, the recording media may become unusable or image data may be damaged.
- Clean the flash surface before use. The heat of flash emission may cause dirt on the flash surface to become discolored or to stick to the flash surface, resulting in insufficient light emission.

## Notes on the LCD screen and lens

- The LCD screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording.
- When the battery level becomes low, the lens might stop moving. Insert a charged battery pack and turn on the camera again.

#### On image data compatibility

- The camera conforms with DCF (Design rule for Camera File system) universal standard established by JEITA (Japan Electronics and Information Technology Industries Association).
- Sony does not guarantee that the camera will play back images recorded or edited with other equipment, or that other equipment will play back images recorded with the camera.

## Warning on copyright

Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

## No compensation for damaged content or recording failure

Sony cannot compensate for failure to record or loss or damage of recorded content due to a malfunction of the camera or recording media, etc.

## **Getting started**

## **Checking the accessories supplied**

• Battery charger BC-CSGB/BC-CSGC (1)



• Power cord (mains lead) (1) (not supplied in the USA and Canada)



• Rechargeable battery pack NP-BG1 (1)/ Battery case (1)





• USB, A/V cable for multi-use terminal (1)




• Wrist strap (1)




- CD-ROM (1)
  - Cyber-shot application software
  - "Cyber-shot Handbook"
  - "Cyber-shot Step-up Guide"
- Instruction Manual (this manual) (1)

Attach the strap and place your hand through the loop to prevent the camera from damage by being dropped.



## 1 Preparing the battery pack

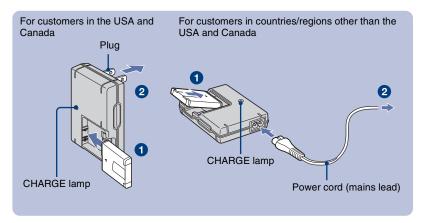

- 1 Insert the battery pack into the battery charger.
- 2 Connect the battery charger to the wall outlet (wall socket).

The CHARGE lamp lights up, and charging starts.

When the CHARGE lamp turns off, charging is finished (Normal charge).


If you continue charging the battery pack for about one more hour (until it is fully charged), the charge will last slightly longer.

## I Charging time

Full charge time	Normal charge time
Approx. 330 min.	Approx. 270 min.

- The table above shows the time required to charge a fully depleted battery pack at a temperature of 25 °C (77 °F). Charging may take longer depending on conditions of use and circumstances.
- See page 31 for the number of images that can be recorded.
- Connect the battery charger to the nearest wall outlet (wall socket).
- Even if the CHARGE lamp is not lit, the battery charger is not disconnected from the AC power source
  (mains) as long as it is connected to the wall outlet (wall socket). If some trouble occurs while using the
  battery charger, immediately shut off the power by disconnecting the plug from the wall outlet (wall
  socket).
- When charging is finished, disconnect the power cord (mains lead) from the wall outlet (wall socket), and remove the battery pack from the battery charger.
- · Designed for use with compatible Sony batteries.

# 2 Inserting the battery pack/a "Memory Stick Duo" (not supplied)

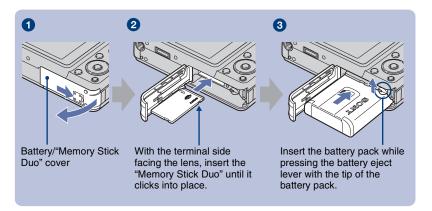

- 1 Open the battery/"Memory Stick Duo" cover.
- 2 Insert the "Memory Stick Duo" (not supplied).
- 3 Insert the battery pack.
- 4 Close the battery/"Memory Stick Duo" cover.

## When there is no "Memory Stick Duo" inserted

The camera records/plays back images using the internal memory (approx. 15 MB).

### To check the remaining battery charge

Press POWER to turn on and check the remaining battery charge on the LCD screen.


Remaining charge indicator	<b>{</b> 7777	<b>4777</b>	<b>4</b> ///	4///	
Status	Sufficient power remaining	Battery almost fully charged	Battery half full	Battery low, recording/ playback will stop soon.	Change the battery with fully charged one, or charge the battery. (The warning indicator flashes.)

- If you use the NP-FG1 battery pack (not supplied), the minutes also appear after the battery remaining indicator ( 777) 60 Min).
- It takes about one minute until the correct remaining charge indicator appears.
- The remaining charge indicator may not be correct depending on conditions of use and circumstances.
- The Clock Set screen appears when you turn on the camera for the first time (page 13).

## To remove the battery pack/"Memory Stick Duo"


Open the battery/"Memory Stick Duo" cover.

### "Memory Stick Duo"



Make sure that **the access lamp** is not lit, then push the "Memory Stick Duo" in once.


### **Battery pack**



Slide **the battery eject lever**. Be sure not to drop the battery pack.

• Never remove the battery pack/"Memory Stick Duo" when the access lamp is lit. This may cause damage to data in the "Memory Stick Duo"/internal memory.

## 3 Turning the camera on/setting the clock

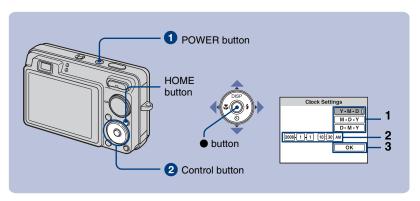

- 1 Press POWER button.
- 2 Set the clock with the control button.
  - **1** Select the date display format with  $\triangle/\nabla$ , then press  $\blacksquare$ .
  - **2** Select each item with  $\blacktriangleleft/\triangleright$  and set the numeric value with  $\blacktriangle/\blacktriangledown$ , then press  $\bullet$ .
  - **3** Select [OK], then press **●**.
- The camera does not have a feature for superimposing dates on images. By using "Picture Motion Browser" in the CD-ROM (supplied), you can print or save images with the date.
- Midnight is indicated as 12:00 AM, and noon as 12:00 PM.


### To change the date and time

Press HOME button, and select [4 Clock Settings] in (Settings) (pages 21, 22).

## Notes on when the power is turned on

- Once the battery pack is inserted in the camera, it may take time before operation becomes possible.
- If the camera is running on battery power and you do not operate the camera for about three minutes, the camera turns off automatically to prevent wearing down the battery pack (Auto power-off function).

## **Shooting images easily**

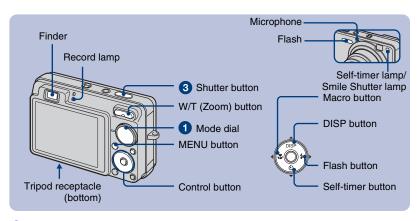

1 Select the desired function from the mode dial.

When shooting still images (Auto Adjustment mode): Select .

When shooting movies: Select .

2 Hold the camera, with your elbows pressed against your body to steady it.



Position the subject in the center of the focus frame.

3 Shoot with the shutter button.

#### When shooting still images:

- **1** Press and hold the shutter button halfway down to focus.
  - The (AE/AF lock) indicator (green) flashes, a beep sounds, the indicator stops flashing and remains lit.
- **2** Press the shutter button fully down.



AE/AF lock indicator

#### When shooting movies:

Press the shutter button fully down.

To stop recording, press the shutter button fully down again.

• The shortest shooting distance is approximately 5 cm (2 inches) (W)/34 cm (1 foot 1 1/2 inches) (T) (from the front of the lens).

## Mode dial/Zoom/Flash/Macro/Self-timer/Display

## Using the mode dial

Set the mode dial to the desired function.

#### Auto Adjustment

Allows you to shoot with the settings adjusted automatically.

#### **EASY** Easy Shooting

Allows easy shooting with easy-to-see indicators.

#### P Program Auto

Allows you to shoot with the exposure adjusted automatically (both the shutter speed and the aperture value). You can adjust other settings using the menu.

#### M Manual Exposure Shooting

Allows you to shoot after adjusting the exposure manually (both the shutter speed and the aperture value).

#### Movie Mode

Allows you to record movies with audio.

#### iso High Sensitivity

Shoots images without a flash even in low lighting.

#### Iso+ Extra High Sensitivity

Allows you to shoot images with maximum sensitivity. The image size is set to [3M].

#### Extra High-speed Burst

Allows you to shoot maximum 5 frames per second in extra high-speed burst. The image size is set to [3M].

#### Smile Shutter

When the camera detects a smile, the shutter is released automatically. For details, see page 17.

#### SCN\* Scene Selection

Selects a setting from the Scene Selection menu.

#### \* Scene Selection in SCN mode

Press MENU and select a setting.

### And Soft Snap

Shoots images with a softer atmosphere for portraits of people, flowers, etc.

#### ▲ Landscape

Shoots with the focus on a distant subject.

#### Twilight Portrait

Shoots sharp images of people in a dark place without losing the nighttime atmosphere.

### Twilight

Shoots night scenes without losing the nighttime atmosphere.

### 🏊 Beach

Shoots seaside or lakeside scenes with the blueness of the water captured more vividly.

#### Snow

Shoots snow scenes in white more clearly.

#### Fireworks

Shoots fireworks in all their splendor.

#### Underwater

Shoots underwater in natural colors using a water-proof housing.

#### W/T Using the zoom

Press T to zoom, press W to undo zoom.

### Flash (Selecting a flash mode for still images)

Press ► (4) on the control button repeatedly until the desired mode is selected.

\$AUTO: Flash Auto

Flashes when there is insufficient light or backlight (default setting).

4: Flash forced on

\$sl: Slow synchro (Flash forced on)

The shutter speed is slow in a dark place to clearly shoot the background that is out of flash light.

(3): Flash forced off

### Macro (Shooting close-up)

Press ◀ (🕷) on the control button repeatedly until the desired mode is selected.

TAUTO: Auto

The camera adjusts the focus automatically from distant subjects to close-up.

Normally, put the camera in this mode.

: Macro

The camera adjusts the focus with priority on close-up subjects. Set Macro On when shooting close subjects.

## Using the self-timer

Press  $\nabla$  ( $\delta$ ) on the control button repeatedly until the desired mode is selected.

**७**<sub>0FF</sub>: Not using the self-timer

 $\mathfrak{S}_{10}$ : Setting the 10-second delay self-timer

♦2: Setting the 2-second delay self-timer

When you press the shutter button, the self-timer lamp flashes and a beep sounds until the shutter operates.

## I DISP Changing the screen display

Press (DISP) on the control button.

Each time you press ▲ (DISP), the display and brightness changes as follows:

Indicators on  $\rightarrow$  Indicators on\*  $\rightarrow$  Histogram on\*  $\rightarrow$  Indicators off\*  $\rightarrow$  LCD screen off

<sup>\*</sup> The brightness of the LCD Backlight is set to up.

## **Shooting in Smile Shutter mode**

When the camera detects a smile, the shutter is released automatically.

- 1 Select (() (Smile Shutter) mode from the mode dial.
- Press the shutter button halfway down to adjust the focus while aiming the camera at the subject to be shoot.
- 3 Press the shutter button all the way down.

The Smile Shutter enters standby.



Smile Detection mark/Number of images


Smile Detection frame (Orange)

Smile Detection Sensitivity indicator This indicates the current smile level.

Each time the smile level reaches the set Smile Detection Sensitivity (indicated by  $\blacktriangleleft$ ), the camera automatically operates the shutter and records up to six images. After recording the image, the Smile Shutter lamp lights.

- Press the shutter button all the way down again to exit the Smile Shutter mode.
- When the Smile Shutter is in standby, the Record lamp (Orange) flashes.
- Shooting using the Smile Shutter ends automatically when either the "Memory Stick Duo" or internal memory becomes full or when six images have been recorded.
- You can select the subject that has priority for smile detection with [Smile Detection] (page 24).
- If a smile is not detected, set the [Smile Detection Sensitivity] (page 24).
- You can have the camera shoot the image automatically when any person displayed in the smile detection frame (Orange) smiles after pressing the shutter button all the way down.
- The image may not be in focus if the distance between the camera and the subject is changed after pressing
  the shutter button all the way down. The suitable exposure may not be obtained if the surrounding
  brightness changes.
- · Faces may not be detected correctly when:
  - It is too dark or too bright.
  - Faces are partially hidden by sunglasses, masks, hats, etc.
  - The subjects are not facing the camera.
- · Smiles may not be detected correctly depending on the conditions.
- · You cannot use the Digital Zoom function.
- You cannot change the zoom ratio when the Smile Shutter is in standby.

## **Viewing/deleting images**

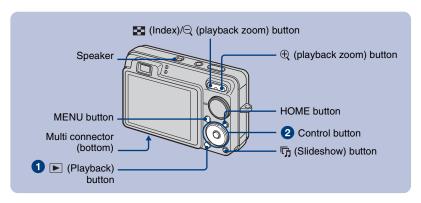

1 Press ▶ (Playback).

If you press  $\triangleright$  when the camera is powered off, the camera is turned on automatically and set to playback mode. To switch to the shooting mode, press  $\triangleright$  again.

2 Select an image with **◄/▶** on the control button.

#### Movie:

Press ● to play back a movie. (Press ● again to stop playback.)

Press ▶ to fast forward, ◀ to rewind. (Press ● to return to normal playback.)

Press  $\blacktriangledown$  to display the volume control screen, then press  $\blacktriangleleft/\blacktriangleright$  to adjust the volume.

- Sometimes images shot using earlier Sony models cannot be played back.
   Press the HOME button, select [ Folder View] from (View Images), then play back the images.
- I m

  To delete images
- **1** Display the image you want to delete, then press MENU.
- 2 Select im [Delete] with ▲/▼ and select [This Image] with ◄/▶, then press ●.
- **3** Select [OK] with  $\triangle$ , then press  $\blacksquare$ .

### I⊕⊖ To view an enlarged image (playback zoom)

Adjust the position with  $\triangle/\nabla/\blacktriangleleft/\triangleright$ .

To cancel the playback zoom, press ●.

#### I ■ To view an index screen

Press (Index) to display the index screen while a still image is displayed.

Then, select an image with  $\triangle/\nabla/\blacktriangleleft/\triangleright$ .

To return to the single image screen, press 

.

- In the default setting, images are displayed in Date View (when using the "Memory Stick Duo") or in Folder View (when using the internal memory).
- You can change the View Mode by selecting (View Images) on the HOME screen when using the "Memory Stick Duo" (page 22).
- Each time you press (Index), the number of images on the index screen increases.

#### To delete images in index mode

- **1** Press MENU while the index screen is displayed.
- 2 Select [Delete] with ▲/▼ and select [Multiple Images] with ◄/▶, then press ●.
- **3** Select the image you want to delete with  $\triangle/\nabla/\blacktriangleleft/\triangleright$ , then press  $\bullet$ .
  - The  $\checkmark$  mark is checked in the checkbox of the image.

To cancel a selection, select an image you have selected for deletion, then press 
again.

- **4** Press MENU and select [OK] with **△**, then press **●**.
  - To delete all the images of a date/folder, select [All Images in Date Range]/[All In This Folder] in step 2, then press ●.

#### **I** To play back a series of images with effects and music (Slideshow)

1 Press (Slideshow) button.

The setup screen appears.

2 Press (Slideshow) button again.


The music will change together with the [Effects]. You can also transfer and change the music to your desired music.

To transfer and change the music, take the following steps.

- $\ensuremath{\mbox{\fontfamily{0.05ex}\mbox{\$
- 3 Connect the camera and a computer with USB cable.
- Start up "Music Transfer" installed to your computer and change the music. For details on changing the music, refer to Help in "Music Transfer".

## To view images on TV

Connect the camera to the TV with the cable for multi-use terminal (supplied).

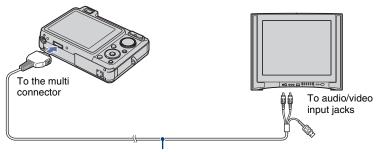

Cable for multi-use terminal (supplied)


To view on HD (High Definition) TV, an HD Output Adaptor Cable (not supplied) is needed.

- If you set the image size to [16:9], you can record images in the size that fills the entire screen of the HD TV.
- You cannot view movies output in [HD (1080i)] signal format. Set [COMPONENT] to [SD] when shooting movies.


## **Learning the various functions – HOME/Menu**

## **Using the HOME screen**

The HOME screen is the gateway screen for all the functions of the camera, and can be called up regardless of the mode setting (shooting/viewing).

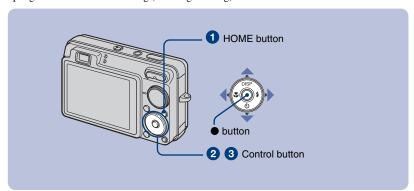

1 Press HOME to display the HOME screen.



- Select a category with ◄/▶ on the control button.
- 3 Select an item with ▲/▼, then press ●.
- When you select the (Manage Memory) or 🖴 (Settings) category




- **1** Select the desired setting with  $\triangle/\nabla$ , then press  $\blacksquare$ .
  - The HOME screen is displayed by pressing ◀.
- **2** Select a setting with  $\triangle/\nabla$ , then press  $\blacksquare$ .
  - The camera is set to the shooting or viewing mode by pressing the HOME button again.

## **HOME items**

Pressing HOME displays the following items. Only the available items are displayed on the screen. Details on each item are displayed in the guide at the bottom of the screen.

Categories	Items	
Shooting	Shooting	
<b>►</b> View Images	Date View	
	Folder View	
	Favorites	
「	Slideshow	
	Music Tool	
	Download Music	Format Music
<b>▲</b> Print	Print	
Manage Memory	Memory Tool	
	Memory Stick Tool Format Change REC.Folder	Create REC.Folder Copy
	Internal Memory Tool Format	
<b>☎</b> Settings	Main Settings	
	Main Settings 1	
	Beep	Function Guide
	Initialize	Smile demo mode
	Main Settings 2 USB Connect Video Out	COMPONENT Wide Zoom Display
	Shooting Settings	
	Shooting Settings 1  AF Illuminator  AF Mode  Conversion Lens	Grid Line Digital Zoom
	Shooting Settings 2 Auto Orientation	Auto Review
	Clock Settings	
	Language Setting	

## Using menu items

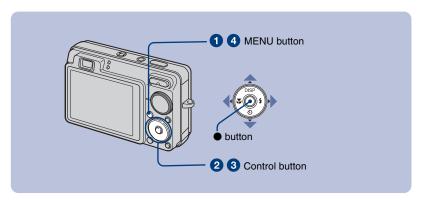

1 Press MENU to display the menu.



- The menu will be displayed only during shooting and playback mode.
- Different items will become visible depending on the selected mode.
- Select a desired menu item with ▲/▼ on the control button.
  - If the desired item is hidden, keep pressing ▲/▼ until the item appears on the screen.
- Select a setting with ◄/▶.



- If the desired item is hidden, keep pressing **◄/▶** until the item appears on the screen.
- Select an item in playback mode, then press •.
- Press MENU to turn off the menu.

## Menu items

The available menu items vary depending on the mode setting (shooting/viewing), and the mode dial position in the shooting mode. Only the available items are displayed on the screen.

## Shooting menu

Scene Selection	Selects the settings pre-adjusted to match various scene conditions.
Image Size	Selects the image size.
Flash	Selects the flash setting in Easy Shooting mode.
Face Detection	Selects the priority subject for adjusting the focus when using face detection.
Smile Detection	Selects the priority subject for the Smile Shutter function.
Smile Detection Sensitivity	Sets the level of sensitivity to detect smile.
REC Mode	Selects the continuous shooting method.
Scene Recognition	Automatically detects the shooting conditions and then takes the shot.
EV	Adjusts Exposure.
ISO	Selects a luminous sensitivity.
Metering Mode	Selects the metering mode.
Focus	Changes the focus method.
White Balance	Adjusts the color tones.
Underwater White Balance	Adjusts the color tones underwater.
Flash Level	Adjusts the amount of flash light.
Red Eye Reduction	Sets to reduce the red-eye phenomenon.
DRO	Optimizes the brightness and contrast.
Noise Reduction	Adjusts the clearness/noise balance of the recording images.
Color Mode	Changes the vividness of the image or adds special effects.
Color Filter	You can add color effects to images as if you use a color filter.
Color Saturation	Adjusts the brightness (Color Staturation) of the image.
Contrast	Adjusts the contrast of the image.
Sharpness	Adjusts the sharpness of the image.
SteadyShot	Selects the anti-blur mode.
Shooting Settings	Selects the shooting settings.

## Viewing menu

s the View Mode. the playback date. ack images filtered to meet certain conditions.
ack images filtered to meet certain conditions.
=
rs images to Favorites or removes images from s.
d performs the Slideshow (playback of a series of
nes still images.
s the image size according to usage.
s accidental erasure.
Print order mark on image that you want to print out.
nages using a PictBridge compliant printer.
a still image.
the folder for viewing images.

## **Enjoying your computer**

You can view images shot with the camera on a computer. By using the software in the CD-ROM (supplied), you can enjoy still images and movies from the camera more than ever. For details, refer to "Cyber-shot Handbook" in the CD-ROM (supplied).

# Supported Operating Systems for USB connection and application software (supplied)

	For Windows users	For Macintosh users
USB connection	Windows 2000 Professional SP4, Windows XP* SP2, Windows Vista*	Mac OS 9.1/9.2/ Mac OS X(v10.1 to v10.5)
Application software "Picture Motion Browser"	Windows 2000 Professional SP4, Windows XP* SP2, Windows Vista*	not compatible

<sup>\* 64-</sup>bit editions and Starter (Edition) are not supported.

<sup>•</sup> Your computer must be pre-installed with an OS listed above. OS upgrades are not supported.

If your OS does not support USB connections, copy images by inserting the "Memory Stick Duo" into the Memory Stick slot on your computer, or use a commercially available Memory Stick Reader/Writer.

For further details on the operating environment of "Picture Motion Browser" Cyber-shot application software, refer to "Cyber-shot Handbook".



## Viewing "Cyber-shot Handbook"

"Cyber-shot Handbook" in the CD-ROM (supplied) explains how to use the camera in detail. Adobe Reader is required to view it

#### For Windows users

 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive.
 The screen below appears.



When you click the [Cyber-shot Handbook] button, the screen for copying "Cyber-shot Handbook" appears.

- **2** Follow the on-screen instructions to copy.
  - When you install "Cyber-shot Handbook", the "Cyber-shot Step-up Guide" will be installed automatically.
- **3** After the installation is complete, double-click the shortcut created on the desktop.


#### For Macintosh users

- 1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive.
- 2 Select the [Handbook] folder and copy "Handbook.pdf" stored in the [GB] folder to your computer.
- **3** After copying is complete, double-click "Handbook.pdf".

## **Indicators on the screen**


Each time you press ▲ (DISP) on the control button, the display changes (page 16).

## When shooting still images




 The indicators are limited in Easy Shooting mode.

## When shooting movies

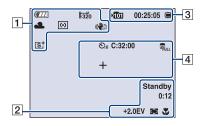

## When playing back

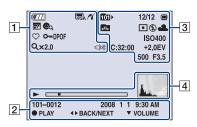

1

1	
<b>47</b> 77	Battery remaining
	Low battery warning
GM GM GM GM VGA G:2 GE:9+ VG:9 FNE ESTO #320	Image size
	Mode dial/Menu (Scene Selection)
P M	Mode dial
<ul><li>※ ♣ </li><li>※ ↓ </li><li>※ ↓ </li><li>※ ↓ </li><li>WB </li><li>WB </li><li>WB </li><li>WB </li><li>WB </li><li>WB </li></ul>	White balance
BRK BRK ±0.3 ±0.7 BRK ±1.0	Burst mode/Bracket mode
(⊙) ●	Metering mode
	Face Detection/Smile Detection
(NON (NOFF	SteadyShot
D-R D-R Plus	DRO
NR- NR+	Noise Reduction
( <b>4</b> 1)	Vibration warning
[ <b>⊕</b> ]1	Smile Detection Sensitivity indicator/Number of images
<b>₩ ■ ■ X1.5 SQ PQ</b>	Zoom scaling
V R S BW	Color mode
OR OG OB Warm COOI	Color Filter
<b>O</b> - <b>O</b> +	Contrast
TL- TL-	Sharpness

<b>3</b> - <b>3</b> -	Color Saturation
~	PictBridge connecting
	View Mode
<b>೨</b> ೩ 🐈 ೩ ೬೩ <b>೯</b> ೩	Filter by Faces
$\Diamond$	Favorites
0-1	Protect
DP0F	Print order (DPOF) mark
Qx2.0	Zoom scaling
VOL. IIIII	Volume
	PictBridge connecting

<b>♦ ♦</b> ►	Manual Exposure Setting Mode
	Mode
● RETURN	Function guide for Manual
● SET	exposure
•	AE/AF lock
ISO400	ISO number
NR	NR slow shutter
125	Shutter speed
F3.5	Aperture value
+2.0EV	Exposure Value
(]) [] •	AF range finder frame
	indicator
1.0m	Semi manual value
*	Macro
REC	Recording/Standby a movie
Standby	
0:12	Recording time (minutes :
	seconds)
101-0012	Folder-file number
2008 1 1	Recorded date/time of the
9:30 AM	playback image
● STOP	Function guide for playing
● PLAY	image
<b>■</b> BACK/NEXT	Selecting images

<b>▼</b> VOLUME	Adjusting volume

J	
<b>×101</b>	Recording folder
<b>101</b> ▶	Playback folder
96	Number of recordable images
8/8 12/12	Image number/Number of images recorded in selected folder
00:25:05	Recordable time (hours : minutes : seconds)
<b>. .</b>	Recording/playback Media ("Memory Stick Duo", Internal memory)
	Changing folder
iscn iscn <sup>+</sup> + ) ン 泉 函 <sup>四</sup>	Scene Recognition
<b>E</b> ON	AF illuminator
<b>③</b>	Red-eye reduction
<b>()</b>	Metering mode
4 4SL (\$)	Flash mode
<b>\$</b> •	Flash charging
AWB ☀ ♣ 祟祟祟ጱ ţwb ►	White balance
C:32:00	Self-diagnosis display
ISO400	ISO number
+2.0EV	Exposure Value
500	Shutter speed
F3.5	Aperture value
D <sub>7</sub> D <sub>w</sub>	Conversion lens

<u></u> ზეი ზე₂	Self-timer
C:32:00	Self-diagnosis display
FULL	Database full

г	AF range finder frame
5 3 5 3 5 1	
! ! L	
+	Spot metering cross hair
<b></b>	Playback
	Playback bar
	Histogram  • ⊗ appears when histogram display is disabled.

## **Battery life and memory capacity**

## Battery life and number of images you can record/view

The numbers shown in the following tables assume a fully charged battery pack (supplied) is used at an ambient temperature of 25 °C (77 °F). The numbers shown for images you can record/view are approximations and allow for changing of the "Memory Stick Duo" as necessary. Note that the actual numbers may be less than those indicated in the table depending on the conditions of use.

#### When shooting still images

LCD screen	Battery life (min.)	No. of Images
On	Approx. 150	Approx. 300
Off	Approx. 170	Approx. 340

- · Shooting in the following situations:
  - [REC Mode] is set to [Normal].
  - [AF Mode] is set to [Single].
  - [SteadyShot] is set to [Shooting].
  - Shooting once every 30 seconds.
  - The zoom is switched alternately between the W and T ends
  - The flash strobes once every two times.
  - The power turns on and off once every ten times.
- The measurement method is based on the CIPA standard
  - (CIPA: Camera & Imaging Products Association)
- The battery life and the number of images do not change, regardless of image size.

#### When viewing still images

Battery life (min.)	No. of Images
Approx. 370	Approx. 7400

 Viewing single images in order at about three second intervals

#### Notes on the battery pack

- Battery capacity decreases over time and through repeated use.
- The battery life and the number of images you can record/view are decreased under the following conditions:
  - The surrounding temperature is low.
  - The flash is used frequently.
  - The camera has been turned on and off many times.
  - The zoom is used frequently.
  - The brightness of LCD Backlight is set to up.
  - [AF Mode] is set to [Monitor].
  - [SteadyShot] is set to [Continuous].
  - The battery power is low.
  - The Face Detection function is activated.

## Recordable number of still images and recordable time of movies

The number of still images and the length of time for movies may vary depending on the shooting conditions.

- Even if the capacity of your recording media is the same as the one in the table below, the number of still images and the length of time for movies may be different.
- You can select the image size from the menu (pages 23, 24).

#### The approximate recordable number of still images

(Units: Images)

Capacity	Internal memory	"Memory Stick Duo" formatted with the camera						
Size	Approx. 15 MB	256 MB	512 MB	1 GB	2 GB	4 GB	8 GB	16 GB
13M	2	43	89	183	369	730	1468	2976
8M	4	72	149	306	618	1223	2457	4981
5M	6	92	190	390	786	1556	3127	6339
3M	10	148	305	625	1261	2497	5016	10169
VGA	96	1420	2932	6000	12102	23956	48138	97618
3:2 (12M)	3	48	100	205	414	821	1649	3343
16:9 (10M)	3	57	119	244	492	974	1957	3968
16:9 (2M)	16	236	489	1001	2018	3995	8025	16270

- The numbers of images listed assume [REC Mode] is set to [Normal].
- When the number of remaining shootable images is greater than 9,999, the ">9999" indicator appears.
- When an image was recorded using earlier Sony models and is played back on the camera, the image may not appear in the actual image size.

### The approximate recordable time of movies

The numbers in the table below show the approximate maximum recordable time obtained by totaling all movie files. The maximum length of time you can shoot continuously is about 10 minutes.

(Units: hour: minute: second)

Capacity	Internal memory	"Memory Stick Duo" formatted with the camera						
Size	Approx. 15 MB	256 MB	512 MB	1 GB	2 GB	4 GB	8 GB	16 GB
640(Fine)	-	0:02:50	0:06:00	0:12:30	0:25:10	0:49:50	1:40:10	3:23:20
640(Standard)	0:00:40	0:10:30	0:22:00	0:45:00	1:30:50	2:59:40	6:01:00	12:12:10
320	0:02:50	0:42:30	1:28:00	3:00:00	6:03:10	11:59:00	24:04:10	48:48:30

<sup>•</sup> Movies with the size set to [640(Fine)] can only be recorded on a "Memory Stick PRO Duo".

<sup>•</sup> The camera does not support HD recordings or playbacks for movies.

## **Troubleshooting**

If you experience trouble with the camera, try the following solutions.

**1** Check the items below, and refer to "Cyber-shot Handbook" (PDF). If a code such as "C/E:□□:□□" appears on the screen, refer to "Cyber-shot Handbook".

Remove the battery pack, wait for about one minute, re-insert the battery pack, then turn on the power.

3 Initialize the settings (page 22).

Consult your Sony dealer or local authorized Sony service facility.

Be aware that by sending the camera for repair, you give consent that the contents of the internal memory, Music files may be checked.

## **Battery pack and power**

#### Cannot insert the battery pack.

• Insert the battery pack correctly to push the battery eject lever (page 11).

#### Cannot turn on the camera.

- After inserting the battery pack into the camera, it may take a few moments for the camera to power up.
- Insert the battery pack correctly (page 11).
- The battery pack is discharged. Insert charged battery pack (page 10).
- The battery pack is dead. Replace it with a new one.
- Use a recommended battery pack.

#### The power turns off suddenly.

- If you do not operate the camera for about three minutes while the power is on, the camera turns off automatically to prevent wearing down the battery pack. Turn on the camera again (page 13).
- The battery pack is dead. Replace it with a new one.

#### The remaining charge indicator is incorrect.

- This phenomenon occurs when you use the camera in an extremely hot or cold location.
- A discrepancy arose between the remaining charge indicator and the actual remaining battery charge. Fully discharge the battery pack once, then charge it to correct the indication.
- The battery pack is discharged. Insert the charged battery pack (page 10).
- The battery pack is dead. Replace it with a new one.

#### Cannot charge the battery pack.

 You cannot charge the battery pack using the AC Adaptor (not supplied). Use the battery charger (supplied) to charge the battery.

## Shooting still images/movies

#### Cannot record images.

- Check the free capacity of the internal memory or "Memory Stick Duo" (page 32). If it is full, do one of the following:
  - Delete unnecessary images (page 18).
- Change the "Memory Stick Duo".
- You cannot record images while charging the flash.
- When shooting a still image, set the mode dial to a position other than **!!!**.
- Set the mode dial to when shooting movies.
- The image size is set to [640(Fine)] when recording movies. Do one of the following:
  - Set the image size to other than [640(Fine)].
- Insert a "Memory Stick PRO Duo".

## Vertical streaks appear when you are shooting a very bright subject.

• The smear phenomenon is occurring and white, black, red, purple, or other streaks appear on the image. This phenomenon is not a malfunction.

## Viewing images

#### Cannot play back images.

- Press (Playback) (page 18).
- The folder/file name has been changed on your computer.
- Sony does not guarantee playback of image files on the camera if the files have been processed using a computer or recorded with another camera.
- The camera is in USB mode. Delete the USB connection.
- Playback is impossible if the Smile Shutter is in standby mode. Exit standby mode by pressing the shutter button all the way down.
- This is caused by copying images on the PC to the "Memory Stick Duo" without using the "Picture Motion Browser". Play such images in Folder View (page 22).
- Sometimes a "Memory Stick Duo" containing images shot with earlier Sony models cannot be played back. Play such images in Folder View (page 22).

# **Precautions**

# Do not use/store the camera in the following places

- In an extremely hot, cold or humid place
   In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction.
- Under direct sunlight or near a heater
   The camera body may become discolored or deformed, and this may cause a malfunction.
- · In a location subject to rocking vibration
- · Near strong magnetic place
- In sandy or dusty places
   Be careful not to let sand or dust get into the camera. This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired.

### On carrying

Do not sit down in a chair or other place with the camera in the back pocket of your trousers or skirt, as this may cause malfunction or damage the camera.

### On cleaning

### Cleaning the LCD screen

Wipe the screen surface with an LCD cleaning kit (not supplied) to remove fingerprints, dust, etc.

#### Cleaning the lens

Wipe the lens with a soft cloth to remove fingerprints, dust, etc.

### Cleaning the camera surface

Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth. To prevent damage to the finish or casing:

- Do not expose the camera to chemical products such as thinner, benzine, alcohol, disposable cloths, insect repellent, sunscreen or insecticide.
- Do not touch the camera with any of the above on your hand.
- Do not leave the camera in contact with rubber or vinyl for a long time.

# On operating temperatures

The camera is designed for use under the temperatures between  $0^{\circ}\text{C}$  and  $40^{\circ}\text{C}$  (32°F and  $104^{\circ}\text{F}$ ). Shooting in extremely cold or hot places that exceed this range is not recommended.

### On moisture condensation

If the camera is brought directly from a cold to a warm location, moisture may condense inside or outside the camera. This moisture condensation may cause a malfunction of the camera.

#### If moisture condensation occurs

Turn off the camera and wait about an hour for the moisture to evaporate. Note that if you shoot with moisture remaining inside the lens, images will not be clear.

# On the internal rechargeable backup battery

The camera has an internal rechargeable battery for maintaining the date and time and other settings regardless of whether the power is on or off.

This rechargeable battery is continually charged as long as you are using the camera. However, if you use the camera for only short periods, it discharges gradually, and if you do not use the camera at all for about one month it becomes completely discharged. In this case, be sure to charge this rechargeable battery before using the camera

However, even if this rechargeable battery is not charged, you can still use the camera, but the date and time will not be indicated.

### Charging method of the internal rechargeable backup battery

Insert charged battery pack in the camera, and then leave the camera for 24 hours or more with the power off.

# **Specifications**

#### Camera

### [System]

Image device:

9.29 mm (1/1.7 type) color CCD,

Primary color filter

Total pixel number of camera:

Approx. 13.9 Megapixels

Effective pixel number of camera:

Approx. 13.6 Megapixels

Lens:

Carl Zeiss Vario-Tessar 3× zoom lens f = 7.6 - 22.8 mm (35 - 105 mm (35 mm film

equivalent)) F2.8(W) - 5.5(T)

Exposure control: Automatic exposure, Scene

Selection (10 modes)

White balance: Automatic, Daylight, Cloudy, Fluorescent 1,2,3, Incandescent, Flash, One

Push derwater W

Underwater White Balance: Auto, Underwater

1,2, Flash

File format (DCF compliant):

Still images: Exif Ver. 2.21 JPEG compliant,

DPOF compatible

Movies: MPEG1 compliant (Monaural)

Recording media: Internal Memory (approx. 15 MB), "Memory Stick Duo"

Flash:Flash range (ISO sensitivity

(Recommended exposure Index) set to Auto): Approx. 0.2 to 5.5 m (7 7/8 inches to 18 feet 5/8 inches) (W)/approx. 0.4 to 2.8 m (1 foot 3 3/4 inches to 9 feet 2 1/4 inches) (T)

### [Input and Output connectors]

Multi connector: Video output

Audio output (Monaural) USB communication

USB communication: Hi-Speed USB (USB 2.0

compliant)

### [LCD screen]

LCD panel: 6.7 cm (2.7 type) TFT drive

Total number of dots: 230 400 (960  $\times$  240) dots

### [Power, general]

Power: Rechargeable battery pack

NP-BG1, 3.6 V

NP-FG1 (not supplied), 3.6 V

AC-LS5K AC Adaptor (not supplied), 4.2 V

Power consumption (during shooting, LCD screen on):

1.4 W

Operating temperature: 0 to 40°C (32 to 104°F)

Storage temperature:  $-20 \text{ to } +60^{\circ}\text{C} (-4 \text{ to } +140^{\circ}\text{F})$ 

Dimensions:  $94.3 \times 59.0 \times 26.8 \text{ mm}$  (3 3/4 × 2 3/8 × 1 1/16 inches) (W/H/D, excluding

protrusions)

Mass: Approx. 187 g (6.6 oz) (including NP-BG1

battery pack, strap, etc.)

Microphone: Monaural Speaker: Monaural

Exif Print: Compatible

PRINT Image Matching III: Compatible

PictBridge: Compatible

# BC-CSGB/BC-CSGC battery charger

Power requirements: AC 100 V to 240 V, 50/60 Hz, 2.6 W (BC-CSGB)/2 W (BC-CSGC)

Output voltage: DC 4.2 V, 0.25 A

Operating temperature: 0 to 40°C (32 to 104°F)

Storage temperature:  $-20 \text{ to } +60^{\circ}\text{C}$  ( $-4 \text{ to } +140^{\circ}\text{F}$ ) Dimensions: Approx.  $62 \times 24 \times 91 \text{ mm}$  ( $21/2 \times 10^{\circ}\text{ mm}$ )

 $31/32 \times 35/8$  inches) (W/H/D)

Mass: Approx. 75 g (2.7 oz)

### Rechargeable battery pack NP-BG1

Used battery: Lithium-ion battery Maximum voltage: DC 4.2 V

Nominal voltage: DC 3.6 V

Capacity: 3.4 Wh (960 mAh)

Design and specifications are subject to change

without notice.

#### **Trademarks**

- Cyber-shot, "Cyber-shot" are trademarks of Sony Corporation.
- "Memory Stick," "Memory Stick PRO", MEMORY STICK PRO, "Memory Stick Duo", MEMORY STICK DUO, "Memory Stick PRO Duo", MEMORY STICK PRO DUO, "Memory Stick PRO-HG Duo, "Memory Stick PRO-HG Duo, "Memory Stick Micro", "MagicGate", and MAGICGATE are trademarks of Sony Corporation.
- "PhotoTV HD" is a trademark of Sony Corporation.
- "InfoLITHIUM" is a trademark of Sony Corporation.
- Microsoft, Windows, DirectX and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh, Mac OS, iMac, iBook, PowerBook, Power Mac and eMac are trademarks or registered trademarks of Apple Inc.
- Intel, MMX, and Pentium are trademarks or registered trademarks of Intel Corporation.
- Adobe and Reader are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the TM or ® marks are not used in all cases in this manual.

# **Español**

Nombre del producto: Cámara Digital

Modelo: DSC-W300

POR FAVOR LEA DETALLADAMENTE ESTE MANUAL DE INSTRUCCIONES ANTES DE CONECTAR Y OPERAR ESTE EQUIPO.

RECUERDE QUE UN MAL USO DE SU APARATO PODRÍA ANULAR LA GARANTÍA.

### **AVISO**

Para reducir el riesgo de incendio o descarga eléctrica, no exponga la unidad a la lluvia ni a la humedad.

## **PRECAUCIÓN**

Sustituya la batería ùnicamente por otra del tipo especificado. De lo contrario, es posible que se produzcan incendios o lesiones.

No exponga las pilas a fuentes de calor excesivo, como la luz solar directa, el fuego o similares.

# Atención para los clientes en Europa

Este producto se ha probado y cumple con la normativa que establece la Directiva EMC si se utiliza un cable de conexión de menos de 3 metros de longitud.

#### Atención

Los campos electromagnéticos a frecuencias específicas podrán influir en la imagen y el sonido de esta unidad.

#### Aviso

Si la electricidad estática o el electromagnetismo interrumpen la transmisión de datos (fallo), reinicie la aplicación o desconecte el cable de comunicación (USB, etc.) y vuelva a conectarlo.

Tratamiento de los equipos eléctricos y electrónicos al final de su vida útil (aplicable en la Unión Europea y en países europeos con sistemas de recogida selectiva de residuos)



Este símbolo en el equipo o el embalaje indica que el presente producto no puede ser tratado como residuos domésticos normales, sino que debe entregarse en el correspondiente punto de recogida de equipos eléctricos y electrónicos. Al asegurarse de que este producto se desecha correctamente, Ud. ayuda a prevenir las consecuencias negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación en el momento de deshacerse de este producto. El reciclaje de materiales ayuda a conservar los recursos naturales. Para recibir información detallada sobre el reciclaje de este producto, póngase en contacto con el ayuntamiento, el punto de recogida más cercano o el establecimiento donde ha adquirido el producto.

## Tratamiento de las baterías al final de su vida útil (aplicable en la Unión Europea y en países europeos con sistemas de recogida selectiva de residuos)



Este símbolo en la batería o en el embalaje indica que la batería proporcionada con este producto no puede ser tratada como un residuo doméstico normal. Al asegurarse de que estas baterías se desechan correctamente, Ud. ayuda a prevenir las consecuencias negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación en el momento de deshacerse de la batería. El reciclaje de materiales ayuda a conservar los recursos naturales.

En el caso de productos que por razones de seguridad, rendimiento o mantenimiento de datos, sea necesaria una conexión permanente con la batería incorporada, esta batería solo deberá de ser reemplazada por personal técnico cualificado para ello. Para asegurarse de que la batería será tratada correctamente, entregar el producto al final de su vida útil en un punto de recogida para el reciclado de aparatos eléctricos y electrónicos.

Para las demás baterías, ver la sección donde se indica como quitar la batería del producto de forma segura.

Deposite la batería en el correspondiente punto de recogida para el reciclado.

Para recibir información detallada sobre el reciclaje de este producto o de la batería, póngase en contacto con el ayuntamiento, el punto de recogida más cercano o el establecimiento donde ha adquirido el producto.

### Aviso para los clientes de países en los que se aplican las directivas de la UE

El fabricante de este producto es Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075, Japón. El representante autorizado en lo referente al cumplimiento de la directiva EMC y a la seguridad de los productos es Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Alemania. Para resolver cualquier asunto relacionado con el soporte técnico o la garantía, consulte las direcciones que se indican en los documentos de soporte técnico y garantía suministrados por separado.

### Notas sobre la utilización de la cámara

### Copia de seguridad de la memoria interna y del "Memory Stick Duo"

No apague la cámara ni extraiga la batería ni el "Memory Stick Duo" con el indicador de acceso encendido, ya que, de lo contrario, es posible que se produzcan daños en los datos de la memoria interna o del "Memory Stick Duo". Realice siempre una copia de seguridad de sus datos para protegerlos.

### Notas sobre la grabación/ reproducción

- Antes de comenzar a grabar, realice una grabación de prueba para asegurarse de que la cámara funciona correctamente.
- Esta cámara no es resistente al polvo, a las salpicaduras ni al agua. Lea "Precauciones" (página 35) antes de utilizar la cámara.
- Tenga cuidado de no dejar que la cámara se moje. Si se introduce agua en la cámara, es posible que se produzca un fallo de funcionamiento. En algunos casos, no se podrá reparar.
- No enfoque la cámara hacia el sol ni hacia otras luces intensas. Esto podría producir fallos de funcionamiento en ésta.
- No utilice la cámara cerca de un lugar donde se generen ondas de radio fuertes o se emita radiación. Es posible que la cámara no grabe o reproduzca las imágenes debidamente.
- La utilización de la cámara en lugares arenosos o polvorientos puede ocasionar un fallo de funcionamiento.
- Si se condensa humedad, elimínela antes de utilizar la cámara (página 35).
- No agite ni golpee la cámara. Esto podría producir fallos de funcionamiento y provocar que no pueda grabar imágenes. Además, es posible que el soporte de grabación quede inutilizable o que los datos de las imágenes se dañen.
- Limpie la superficie del flash antes de utilizarlo. El calor de la emisión del flash puede hacer que la superficie del flash se ensucie, que se descolore o incluso se puede adherir a ella, lo que ocasionaría una emisión de luz insuficiente.

# Notas sobre la pantalla LCD y el objetivo

- La pantalla LCD está fabricada mediante tecnología de muy alta precisión, de forma que más del 99,99% de los píxeles son operativos para uso efectivo. No obstante, es posible que se observen constantemente en la pantalla LCD pequeños puntos negros y/o brillantes (blancos, rojos, azules o verdes). Estos puntos son normales en el proceso de fabricación y no afectan en modo alguno a la grabación.
- Cuando baje el nivel de la batería, puede que el objetivo deje de moverse. Inserte una batería cargada y vuelva a encender la cámara.

# Sobre la compatibilidad de datos de imágenes

- La cámara cumple con la norma universal DCF (Design rule for Camera File system) definida por la JEITA (Japan Electronics and Information Technology Industries Association).
- Sony no garantiza la reproducción en otros equipos de imágenes grabadas con su cámara y la reproducción en la cámara de imágenes grabadas o editadas con otros equipos.

# Aviso sobre los derechos de

Los programas de televisión, las películas, las cintas de vídeo y demás materiales pueden estar protegidos por las leyes de derechos de autor. La grabación no autorizada de tales materiales puede ir en contra de lo establecido por las leyes de derechos de autor.

### No se ofrecerá ninguna compensación por daños en los contenidos o fallos en la grabación

Sony no ofrecerá compensación alguna por fallos en la grabación o pérdida o daños en el contenido grabado debido a algún fallo de funcionamiento de la cámara o del medio de grabación, etc.

# Índice

Notas sobre la utilización de la camara	4
Introducción	e
Comprobación de los accesorios suministrados	7
2 Inserción de la batería o de un "Memory Stick Duo" (no suministrad	
3 Encendido de la cámara y ajuste del reloj	
Toma sencilla de imágenes	
Dial de modo/Zoom/Flash/Macro/Autodisparador/Pantalla Toma de imágenes en modo Captador de sonrisas	
Visualización/borrado de imágenes	. 15
Acerca de las diversas funciones – HOME/Menú	18 19
Utilización de los elementos del menú Elementos del menú	
Prestaciones del ordenador	. 24
Sistemas operativos admitidos para la conexión USB y software de aplicación (suministrado)	
Visualización "Guía práctica de Cyber-shot"	25
Indicadores de la pantalla	. 26
Duración de la batería y capacidad de la memoria	/ver
Número de imágenes fijas que se pueden grabar y tiempo de grabac de películas	ción
Solución de problemas	. 32
Batería y alimentación	33
Visualización de imágenes	
Precauciones	. 35
Especificaciones	36

# Introducción

# Comprobación de los accesorios suministrados

• Cargador de batería BC-CSGB/BC-CSGC (1)



• Cable de alimentación (1) (no suministrado en EE. UU. ni Canadá)




• Batería recargable NP-BG1 (1)/Funda de la batería (1)





• Cable USB, A/V para terminal multiuso (1)




• Correa para la muñeca (1)




- CD-ROM (1)
  - Software de aplicación Cyber-shot
  - "Guía práctica de Cyber-shot"
  - "Guía avanzada de Cyber-shot"
- Manual de instrucciones (este manual) (1)

Instale la correa e introduzca su mano en ella para evitar que se produzcan daños en la cámara debido a caídas.



# 1 Preparación de la batería

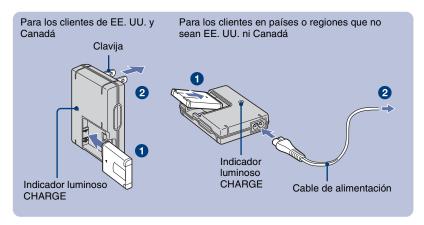

# 1 Introduzca la batería en el cargador.

# 2 Conecte el cargador de la batería a una toma de pared.

El indicador luminoso CHARGE se enciende y la batería empieza a cargarse.


Cuando el indicador luminoso CHARGE se apaga, significa que la carga ha finalizado (carga normal). Si sigue cargando la batería durante aproximadamente más de una hora (hasta que esté totalmente cargada), la carga durará un poco más.

# l Tiempo de carga

Tiempo de carga completa	Tiempo de carga normal
Aprox. 330 min (minuto)	Aprox. 270 min (minuto)

- $\bullet$  La tabla anterior muestra el tiempo necesario para cargar una batería totalmente vacía a una temperatura de 25  $^{\circ}\mathrm{C}$ 
  - El tiempo de carga puede ser mayor en determinadas circunstancias o condiciones de uso.
- Consulte en la página 29 el número de imágenes que se pueden grabar.
- Conecte el cargador de la batería a la toma de pared más cercana.
- Aunque la lámpara CHARGE no esté encendida, el cargador de batería no estará desconectado de la
  fuente de alimentación de ca en tanto que el mismo esté conectado a la toma de corriente de la pared. Si
  ocurre algún problema mientras utiliza el cargador de batería, interrumpa inmediatamente la alimentación
  desconectando la clavija de la toma de corriente de la pared.
- Cuando la batería esté cargada, desconecte el cable de alimentación de la toma de pared y retire la batería del cargador.
- · Diseñado para utilizarse con baterías Sony compatibles.

# 2 Inserción de la batería o de un "Memory Stick Duo" (no suministrado)

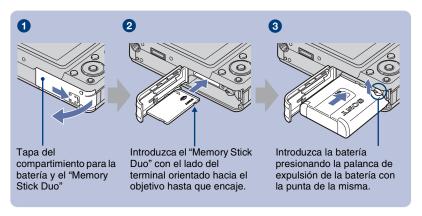

- 1 Abra la tapa del compartimiento para la batería/"Memory Stick Duo".
- 2 Inserte el "Memory Stick Duo" (no suministrado).
- 3 Introduzca la batería.
- 4 Cierre la tapa del compartimiento para la batería/"Memory Stick Duo".

# Cuando no hay insertado un "Memory Stick Duo"

La cámara graba y reproduce imágenes con la memoria interna (aprox. 15 MB)

### Para comprobar la carga restante de la batería

Pulse el botón POWER para encender y comprobar la carga restante en la pantalla LCD.


Indicador de carga restante	<b>\$</b> 7771	4777	<b>477</b>	4777	
Estado	Carga suficiente	Batería casi totalmente cargada	Batería medio cargada	Batería baja; la grabación o reproducción se detendrán pronto.	Cambie la batería por otra totalmente cargada o cargue la batería. (El indicador de advertencia parpadea).

- Si utiliza la batería NP-FG1 (no suministrada), los min (minuto) también aparecen después del indicador de batería restante (477) 60 Min).
- El indicador correcto de la carga restante tarda aproximadamente un minuto en aparecer.
- En determinadas circunstancias y condiciones de uso, el indicador de la carga restante que aparece podría no ser correcto.
- La pantalla de ajuste del reloj aparece cuando se enciende la cámara por primera vez (página 10).

## Para retirar la batería/"Memory Stick Duo"


Abra la tapa del compartimiento para la batería/"Memory Stick Duo".

### "Memory Stick Duo"



Compruebe que el **indicador luminoso de acceso** no esté encendido y empuje el "Memory Stick Duo" hacia dentro una vez.


### Batería



Deslice la palanca de expulsión de la batería.
Tenga cuidado de que no se caiga la batería.

 No retire la batería/"Memory Stick Duo" cuando el indicador luminoso de acceso esté encendido. Podría dañar los datos del "Memory Stick Duo"/memoria interna.

# 3 Encendido de la cámara y ajuste del reloj

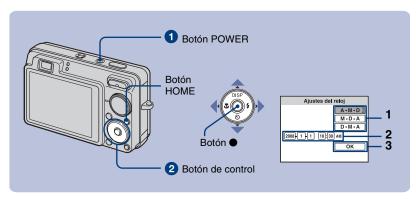

- 1 Pulse el botón POWER.
- 2 Ajuste el reloj con el botón de control.
  - 1 Seleccione el formato de visualización de la fecha con △/▼ y, a continuación, pulse ●.
  - 2 Seleccione cada elemento mediante ◄/►, ajuste el valor numérico con ▲/▼ y, a continuación, pulse ●.
  - **3** Seleccione [OK] y, a continuación, pulse ●.
- La cámara no dispone de función para superponer fechas a las imágenes. Mediante el software "Picture Motion Browser" incluido en el CD-ROM (suministrado), es posible imprimir o almacenar imágenes con la fecha.
- La medianoche se indica como 12:00 AM y el mediodía como 12:00 PM.


## Para cambiar la fecha y la hora

Pulse el botón HOME y seleccione [4] Ajustes del reloj] en 📤 (Ajustes) (páginas 18 y 20).

### Notas sobre cuando la alimentación está activada

- Una vez se ha insertado la batería en la cámara, es posible que deba esperar unos min (minuto) para poder utilizarla.
- Si no utiliza la cámara durante unos tres min (minuto) mientras esté funcionando con batería, la cámara se apaga automáticamente para evitar que la batería se descargue (función de apagado automático).

# Toma sencilla de imágenes

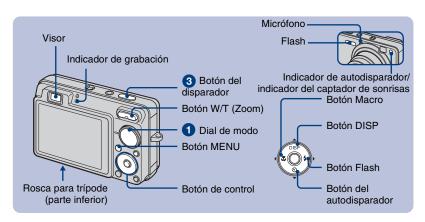

- 1 Seleccione la función que desee con el dial de modo.
  - Cuando se estén tomando imágenes fijas (modo Ajuste automático): Seleccione . Cuando se filman películas: Seleccione .
- Sujete la cámara sin moverla y mantenga los brazos en los costados.



Sitúe el motivo en el centro del cuadro de enfoque.

3 Pulse el botón del disparador para tomar la imagen.

### Para tomar imágenes fijas:

- **1** Mantenga pulsado el botón del disparador hasta la mitad para realizar el enfoque.
  - El indicador (bloqueo AE/AF) (verde) parpadea, suena un pitido, y el indicador deja de parpadear y permanece encendido.
- **2** Pulse el botón del disparador a fondo.



Indicador bloqueo AE/AF

### Para filmar películas:

Pulse el botón del disparador a fondo.

Para detener la grabación, pulse de nuevo el botón del disparador a fondo.

 La distancia de toma de imagen mínima es de aproximadamente 5 cm (W)/34 cm (T) (desde la parte frontal del objetivo).

# Dial de modo/Zoom/Flash/Macro/Autodisparador/Pantalla

#### Utilización del dial de modo

Ajuste el dial de modo en la función deseada.

Ajuste automático

Permite tomar imágenes con los ajustes establecidos automáticamente.

#### **FASY** Toma fácil

Permite tomar imágenes fácilmente con indicadores fáciles de ver.

### P Programa automático

Permite tomar imágenes con la exposición ajustada automáticamente (la velocidad de obturación y el valor de la abertura). Es posible configurar otros ajustes mediante el menú.

### M Toma con exposición manual

Permite tomar imágenes tras ajustar la exposición manualmente (la velocidad de obturación y el valor de la abertura).

### Modo película

Permite grabar películas con sonido.

### Iso Alta sensibilidad

Permite tomar imágenes sin flash incluso en condiciones de iluminación escasa.

### Iso+ Sensibilidad extra alta

Permite tomar imágenes con el ajuste de sensibilidad más alto. El tamaño de imagen está ajustado en [3M]

### ☐ Ráfaga Velocidad muy alta

Permite tomar hasta un máximo de 5 fotogramas por segundo en el modo de ráfaga extra rápida. El tamaño de imagen está ajustado en [3M]

### © Captador de sonrisas

Cuando la cámara detecta una sonrisa, el disparador se acciona automáticamente. Para obtener más información, consulte la página 14.

### SCN\* Selección escena

Permite seleccionar un ajuste del menú de selección de escena.

### \* Selección de escena en modo SCN

Pulse MENU y seleccione un ajuste.

### A Instantánea suave

Permite tomar imágenes con una atmósfera más suave para retratos de personas, flores, etc.

### Paisaje

Permite tomar imágenes enfocando en sujetos lejanos.

### Retrato crepúsculo

Permite tomar imágenes nítidas de personas en lugares oscuros sin perder el ambiente nocturno.

### Crepúsculo

Permite tomar escenas nocturnas sin perder el ambiente nocturno.

### n Playa

Permite tomar escenas en la orilla del mar o de un lago capturando el azul del mar con mayor intensidad.

#### 🎳 Nieve

Permite tomar escenas en la nieve con un blanco de mayor claridad.

### Fuegos artificiales

Permite tomar escenas de fuegos artificiales en todo su esplendor.

#### Submarino

Permite tomar imágenes bajo el agua en colores naturales utilizando un receptáculo resistente al agua.

#### W/T Utilización del zoom

Pulse T para activar el zoom y pulse W para cancelar el zoom.

## 14 Flash (selección de un modo de flash para imágenes fijas)

Pulse ► (\$) del botón de control varias veces hasta que se seleccione el modo que desee.

Destella cuando no hay suficiente luz o luz de fondo (ajuste predeterminado).

≰: Flash forzado activado

\$sl: Sincronización lenta (flash forzado activado)

La velocidad de obturación es lenta en lugares oscuros para captar con claridad los fondos que se encuentran fuera del alcance de la luz del flash.

(1): Flash forzado desactivado

### ■ Macro (toma de primeros planos)

Pulse ◀ (🖏) del botón de control varias veces hasta que se seleccione el modo que desee.

YAUTO: automático

La cámara ajusta el enfoque automáticamente de motivos lejanos a primeros planos.

Ajuste normalmente la cámara en este modo.

### : Macro

La cámara ajusta el enfoque dando prioridad a los motivos situados en primer plano. Establezca el ajuste Macro activado para tomar imágenes de motivos cercanos.

# Utilización del autodisparador

Pulse ▼ (🌖) del botón de control varias veces hasta que se seleccione el modo que desee.

**७**<sub>0FF</sub>: no se utiliza el autodisparador

¿₁₀: se ajusta el autodisparador de 10 s (segundo) de retardo


S₂: se ajusta el autodisparador de 2 s (segundo) de retardo

Si pulsa el botón del disparador, el indicador luminoso del autodisparador parpadeará y sonará un pitido hasta que funcione el disparador.

### I DISP Cambio de la visualización en pantalla

Pulse ▲ (DISP) del botón de control.

Cada vez que pulse el botón ▲ (DISP), la pantalla y el brillo cambiarán de la siguiente manera:




<sup>\*</sup> El brillo de la luz de fondo de la pantalla LCD está ajustado en un nivel alto.

# Toma de imágenes en modo Captador de sonrisas

Cuando la cámara detecta una sonrisa, el disparador se acciona automáticamente.

- **1** Seleccione el modo ⊙ (Captador de sonrisas) con el dial de modo.
- 2 Pulse el botón del disparador hasta la mitad para ajustar el enfoque mientras dirige la cámara hacia el objetivo que desea fotografiar.
- 3 Pulse el botón del disparador hasta el fondo.

El captador de sonrisas entrará en modo en espera.



Marca de detección de sonrisas/número de imágenes


Marco de detección de sonrisas (naranja)

Indicador de sensibilidad de la detección de sonrisas Esta opción indica el grado de sonrisa actual.

Cada vez que el nivel de sonrisa alcanza la sensibilidad de la detección de sonrisas ajustada (indicada mediante ◀), la cámara acciona automáticamente el obturador y toma hasta seis imágenes. Después de guardar la imagen, el indicador del captador de sonrisas se ilumina.

- 4 Pulse el botón del disparador hasta el fondo de nuevo para salir del modo captador de sonrisas.
- Cuando el captador de sonrisas está en modo de espera, el indicador de grabación (naranja) parpadea.
- Al tomar imágenes con el captador de sonrisas, éste se desactiva automáticamente si el "Memory Stick Duo" o la memoria interna se llena o si se guardan seis imágenes.
- Es posible seleccionar el motivo que desea que tenga prioridad en la detección de sonrisas mediante [Detección sonrisas] (página 22).
- Si la sonrisa no se detecta, ajuste [Sensib detección sonrisas] (página 22).
- Es posible ajustar la cámara para que tome imágenes automáticamente cuando cualquier persona que aparece en el marco de detección de sonrisa (naranja) sonríe después de apretar el botón del disparador hasta el fondo.
- Es posible que la imagen no esté enfocada si la distancia entre la cámara y el motivo se modifica después de pulsar el botón del disparador hasta el fondo. No se obtendrá la exposición adecuada si el brillo de la luz del entorno cambia.
- Es posible que no se detecten bien las caras si:
  - El entorno está muy oscuro o hay demasiada luz.
  - Las caras están parcialmente escondidas detrás de gafas, máscaras, sombreros, etc.
  - Los motivos no miran hacia la cámara.
- Es posible que no se detecten correctamente las sonrisas en función de las condiciones.
- No es posible utilizar la función Zoom digital.
- No es posible cambiar el porcentaje de zoom si el captador de sonrisas está en modo en espera.

# Visualización/borrado de imágenes

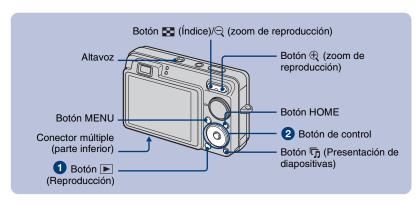

1 Pulse | (Reproducción).

Si se pulsa 🕞 cuando la cámara está apagada, la cámara se enciende automáticamente en modo de reproducción. Para pasar al modo de toma de imágenes, pulse 🕞 otra vez.

2 Seleccione una imagen mediante ◄/► del botón de control.

#### Película:

Pulse ● para reproducir películas. (Pulse ● de nuevo para detener la reproducción).

Pulse ▶ para avanzar rápidamente, ◀ para rebobinar. (Pulse ● para regresar a la reproducción normal).

Pulse ♥ para visualizar la pantalla de control de volumen y, a continuación, pulse ◀/▶ para ajustar el volumen.

• En ocasiones, las imágenes tomadas con modelos de Sony anteriores no pueden reproducirse. Pulse el botón HOME, seleccione [ Ver carpetas] en (Visionado de imágs.) y, a continuación, reproduzca las imágenes.

# l i Para borrar imágenes

- 1 Visualice la imagen que desee borrar y pulse MENU.
- 2 Seleccione m [Borrar] con ▲/▼, seleccione [Esta ima] con ◄/▶ y, a continuación, pulse ●.
- **3** Seleccione [OK] con **△** y, a continuación, pulse **●**.

# I⊕⊝ Para visualizar una imagen ampliada (zoom de reproducción)

Pulse ⊕ mientras se visualiza una imagen fija. Para cancelar el zoom, pulse ⊖. Ajuste la posición con **A/▼/**◆/**▶**.

Para cancelar el zoom de reproducción, pulse 

.

### Para visualizar una pantalla de índice

Pulse [1] (Índice) para que aparezca la pantalla de índice mientras se visualiza una imagen fija.

A continuación, seleccione una imagen con  $\triangle/\nabla/\triangle$ .

Para volver a la pantalla de una sola imagen, pulse ●.

- En la configuración predeterminada, las imágenes se muestran en Ver fecha (si se utiliza el "Memory Stick Duo") o en Ver carpetas (si se utiliza la memoria interna).
- Es posible cambiar el Modo visualización mediante la selección de (Visionado de imágs.) en la pantalla HOME mientras utiliza "Memory Stick Duo" (página 19).
- Cada vez que pulse 🚰 (Índice), aumentará el número de imágenes que aparece en la pantalla de índice.

### Para borrar imágenes en el modo de índice

- **1** Pulse MENU cuando se muestre la pantalla de índice.
- 2 Seleccione [Borrar] con ▲/▼, seleccione [Múltiples imágenes] con ◄/► y, a continuación, pulse ●.
- **3** Seleccione la imagen que desee borrar con **△/▼/√/**▶ y, a continuación, pulse **●**.

La marca 

aparecerá en el cuadro de verificación de la imagen.

Para cancelar la selección de una imagen, seleccione la imagen que había marcado para borrar y pulse 

otra vez.

- **4** Pulse MENU, seleccione [OK] con **△** y, a continuación, pulse **●**.
  - Para borrar todas las imágenes de una fecha o carpeta, seleccione [Todas imágs de rango fecha]/[Todo
    En Esta Carpeta] en el paso 2 y, a continuación, pulse ●.

# Image: Para reproducir una serie de imágenes con efectos y música (Presentación de diapositivas)

1 Pulse el botón 🏗 (Presentación de diapositivas).

Aparecerá la pantalla de configuración.

2 Pulse el botón 📆 (Presentación de diapositivas) otra vez.


La música cambiará junto con los [Efectos]. También es posible transferir y cambiar la música por la que usted desee.

Para transferir y cambiar la música, lleve a cabo los siguientes pasos.

- ① Pulse el botón HOME. A continuación, seleccione [ Herramienta música] → [Desc música] en (Diapositivas) (página 19).
- ② Instale en el equipo el software incluido en el CD-ROM (suministrado).
- 3 Conecte la cámara y un equipo con el cable USB.
- 4 Inicie el software "Music Transfer" instalado en su equipo y cambie la música. Para obtener más información acerca del cambio de la música, consulte la Ayuda del software "Music Transfer".

## Para visualizar imágenes en el televisor

Conecte la cámara al televisor mediante el cable para terminal multiuso (suministrado).

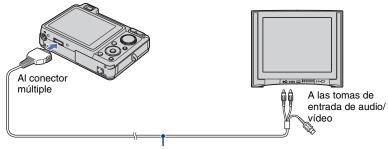

Cable para terminal multiuso (suministrado)


Para ver imágenes en un televisor HD (Alta definición), es necesario disponer de un Cable de adaptador de salida HD (no suministrado).

- Si ajusta el tamaño de la imagen en [16:9], podrá grabar las imágenes en un tamaño que llene toda la pantalla del televisor HD.
- No es posible visualizar películas emitidas en formato de señal [HD(1080i)]. Ajuste [COMPONENT] en [SD] cuando filme películas.


# Acerca de las diversas funciones – HOME/Menú

# Utilización de la pantalla HOME

La pantalla HOME es la pantalla de acceso a todas las funciones de la cámara, y es posible acceder a ella independientemente del ajuste del modo (toma/visualización).

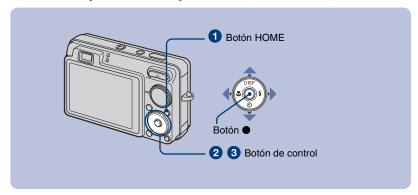

1 Pulse HOME para visualizar la pantalla HOME.



- 2 Seleccione una categoría mediante ◄/▶ del botón de control.
- 3 Seleccione un elemento con ▲/▼ y, a continuación, pulse ●.
- Al seleccionar la categoría 🔳 (Gestión de memoria) o 🚔 (Ajustes)



- 1 Seleccione el ajuste deseado mediante ▲/▼ y, a continuación, pulse ●.
  - La pantalla HOME aparecerá al pulsar ◀.
- 2 Seleccione un ajuste con ▲/▼ y, a continuación, pulse ●.
  - La cámara se ajusta en el modo de toma o de visualización de imágenes mediante la pulsación del botón HOME de nuevo.

# Elementos de la pantalla HOME


Si pulsa el botón HOME aparecerán los siguientes elementos. En la pantalla solamente se visualizan los elementos disponibles. Los detalles sobre cada elemento aparecerán en la guía situada en la parte inferior de la pantalla.

Categoría	Elementos	
■ Toma de imagen	Toma de imagen	
■ Visionado de imágs.	Ver fecha	
	Ver carpetas	
	Favoritos	
📆 Diapositivas	Diapositivas	
	Herramienta música	
	Desc música	Format músi
<b>▲</b> Imprimir	Imprimir	
Gestión de memoria	Herrta. Memoria	
	Her Memory Stick Formatear Camb. Carp. Grab	Crea CarpGrabación Copiar
	Herr.memoria interna Formatear	

# Para obtener más información acerca de la operación 🐨 página 18

Categoría	Elementos	
📤 Ajustes	Ajustes principales	
	Ajustes principales 1	
	Pitido	Guía funciones
	Inicializar	ModoDemoSonrisa
	Ajustes principales 2	
	Conexión USB	COMPONENT
	Salida vídeo	PantallaZoomAncho
	Ajustes de toma	
	Ajustes toma de imagen 1	
	Iluminador AF	Cuadrícula
	Modo AF	Zoom digital
	Objetivo conver	
	Ajustes toma de imagen 2	
	Orient. autom.	Revisión autom
	Ajustes del reloj	
	Language Setting	

# Utilización de los elementos del menú

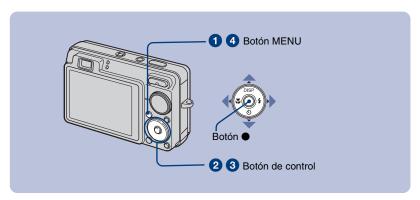

1 Pulse MENU para visualizar el menú.



- El menú sólo se muestra durante el modo de toma de imágenes y reproducción.
- En función del modo seleccionado, se harán visibles diferentes elementos.
- Seleccione el elemento deseado con ▲/▼ del botón de control.
  - Si el elemento deseado está oculto, siga pulsando ▲/▼ hasta que el elemento aparezca en la pantalla.
- 3 Seleccione un ajuste con **◄/▶**.



- Si el elemento deseado está oculto, siga pulsando ◄/▶ hasta que el elemento aparezca en la pantalla.
- Seleccione un elemento en el modo de reproducción y, a continuación, pulse ●.
- 4 Pulse MENU para desactivar el menú.

# Elementos del menú

Los elementos del menú disponibles varían en función del ajuste del modo (toma/ visualización) y de la posición del dial de modo en el modo de toma de imágenes. En la pantalla solamente se visualizan los elementos disponibles.

## Menú de toma de imágenes

Selección escena	Selecciona los ajustes preajustados para adaptarse a varias condiciones de escena.
Tam imagen	Selecciona el tamaño de la imagen.
Flash	Selecciona el ajuste del flash en modo Toma fácil.
Detección de cara	Selecciona el motivo que desea que tenga prioridad para ajustar el enfoque al utilizar la detección de cara.
Detección sonrisas	Selecciona el motivo que desea que tenga prioridad para la función Captador de sonrisas.
Sensib detección sonrisas	Ajusta el nivel de sensibilidad para detectar una sonrisa.
Modo Grabación	Selecciona el método de toma continua de imágenes.
Reconocimiento de escena	Detecta automáticamente las condiciones de disparo y, a continuación, toma la imagen.
EV	Ajusta la exposición.
ISO	Selecciona la sensibilidad luminosa.
Modo medición	Selecciona el modo de medición.
Enfoque	Cambia el método de enfoque.
Balance Blanco	Ajusta los tonos del color.
Balance Blanco submarino	Ajusta los tonos del color bajo el agua.
Nivel flash	Permite ajustar la cantidad de luz del flash.
Reducción ojos rojos	Permite reducir el efecto ojos rojos.
DRO	Optimiza el brillo y el contraste.
Reducción de ruido	Permite ajustar el balance de claridad/ruido de las imágenes grabadas.
Modo color	Cambia la intensidad de la imagen o añade efectos especiales.
Filtro color	Es posible añadir efectos de color a las imágenes utilizando un filtro de color.
Saturación de color	Permite ajustar el brillo (Saturación de color) de la imagen.
Contraste	Permite ajustar el contraste de la imagen.
Nitidez	Permite ajustar la nitidez de la imagen.
SteadyShot	Selecciona el modo de toma estable.

Ajustes de toma	Selecciona los ajustes de toma de imágenes.
Menú de visualización	
(Borrar)	Borra imágenes.
(Modo visualización)	Permite cambiar el Modo visualización.
(Lista Fecha)	Selecciona la fecha de reproducción.
Q (Filtro por caras)	Reproduce imágenes filtradas para que encajen en determinadas condiciones.
◯ (Agregar/quitar Favoritos)	Registra o borra imágenes de Favoritos.
(Diapositivas)	Ajusta y realiza la presentación de diapositivas (reproducción de una serie de imágenes).
(Retocar)	Retoca las imágenes fijas.
🎳 (Múltiples tamaños)	Cambia el tamaño de la imagen en función de su uso.
or (Proteger)	Impide el borrado accidental.
DP0F	Permite añadir una marca de orden de impresión a la imagen que desea imprimir.
<b>止</b> (Imprimir)	Imprime imágenes mediante una impresora compatible con PictBridge.
(Rotar)	Gira una imagen fija.
(Seleccionar carpeta)	Selecciona la carpeta de visualización de imágenes.

# Prestaciones del ordenador

Las imágenes tomadas con la cámara se pueden ver en el ordenador. Mediante la utilización del software incluido en el CD-ROM (suministrado), es posible disfrutar de imágenes fijas y películas desde la cámara más que nunca. Para obtener información detallada, consulte la "Guía práctica de Cyber-shot" incluida en el CD-ROM (suministrado).

# Sistemas operativos admitidos para la conexión USB y software de aplicación (suministrado)

	Para usuarios de Windows	Para usuarios de Macintosh
Conexión USB	Windows 2000 Professional SP4, Windows XP* SP2, Windows Vista*	Mac OS 9,1/9,2/ Mac OS X (v10,1 a v10,5)
Software de aplicación "Picture Motion Browser"	Windows 2000 Professional SP4, Windows XP* SP2, Windows Vista*	incompatible

<sup>\*</sup> Las ediciones de 64 bits y Starter (Edition) no son compatibles.

- Si su sistema operativo no es compatible con las conexiones USB, copie las imágenes insertando el "Memory Stick Duo" en la ranura para Memory Stick del ordenador, o utilice un lector o grabador de Memory Stick disponible en el mercado.
- Para obtener más información sobre el entorno operativo de la aplicación de software "Picture Motion Browser" Cyber-shot, consulte "Guía práctica de Cyber-shot".

El ordenador debe contener uno de los sistemas operativos enumerados anteriormente preinstalados. Las actualizaciones de los sistemas operativos no son compatibles.



# Visualización "Guía práctica de Cyber-shot"

"Guía práctica de Cyber-shot" incluida en el CD-ROM (suministrado) explica detalladamente cómo utilizar la cámara. Para poder visualizarla, es necesario disponer de Adobe Reader.

### Para usuarios de Windows

 Encienda el ordenador e inserte el CD-ROM (suministrado) en la unidad de CD-ROM.

Aparece la pantalla siguiente.



Si hace clic en el botón [Cyber-shot Handbook], aparecerá la pantalla para copiar "Guía práctica de Cyber-shot".

- 2 Siga las instrucciones de la pantalla para realizar la copia.
  - Al instalar "Guía práctica de Cyber-shot", la "Guía avanzada de Cyber-shot" se instalará automáticamente.
- 3 Una vez finalizada la instalación, haga doble clic en el acceso directo creado en el escritorio.


### Para usuarios de Macintosh

- Encienda el ordenador e inserte el CD-ROM (suministrado) en la unidad de CD-ROM.
- 2 Seleccione la carpeta [Handbook] y copie el archivo "Handbook.pdf" almacenado en la carpeta [ES] del ordenador.
- **3** Una vez finalizada la copia, haga doble clic en "Handbook.pdf".

# Indicadores de la pantalla


Cada vez que pulse ▲ (DISP) del botón de control, la visualización cambiará (página 13).

### Cuando se toman imágenes fijas




 Los indicadores están limitados en el modo Toma fácil.

## l Cuando se filman películas

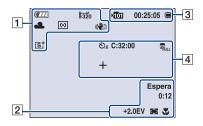

# Cuando se reproduce

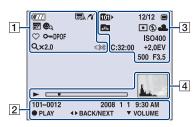

1

1	
<b>4777</b>	Batería restante
(	Advertencia de poca batería
GM GM GM GM VGA G:2 GE:9+ GE:9 FINE ESTD #320	Tamaño de imagen
	Dial de modo/menú (selección de escena)
P M	Dial de modo
<ul><li>※ ♣ ※ ※</li><li>※ ☆ ‡<sup>WB</sup></li><li>WB</li><li>WB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li>YB</li><li></li></ul>	Balance de blancos
BRK BRK ±0.3 ±0.7	Modo ráfaga/modo
BRK ±1.0	variación de exposición
(i) •	Modo de medición
	Detección de cara/ Detección sonrisas
(NON (NOFF	SteadyShot
D-R D-R	DRO
NR- NR+	Reducción de ruido
( <b>4</b> 1)	Aviso de vibración
[ <b>③</b> ]1	Indicador de sensibilidad de detección de sonrisas/ número de imágenes
X1,5 sQ PQ	Relación del zoom
×1,5	Relación del zoom  Modo de color
x1,5 sQ PQ V R	Modo de color Filtro color
x1,5 sQ PQ V R T S BW	Modo de color
x1,5 sQ PQ V R R S BW	Modo de color Filtro color

<b>⊕ ⊕</b>	Saturación de color
<b>(</b> (	Conexión PictBridge
	Modo visualización
<b>≗</b> a <b>*</b> a <b>©</b> a <b>€</b> a	Filtro por caras
$\Diamond$	Favoritos
б	Proteger
DP0F	Marca de orden de impresión (DPOF)
Qx2,0	Relación del zoom
VOL. IIIIIIIII	Volumen
r\$2	Conexión PictBridge

<b>♦ ♦</b> ►	Modo ajuste de exposición manual
● RETURN ● SET	Guía de funciones para exposición manual
•	Bloqueo AE/AF
ISO400	Número ISO
NR	Obturación lenta NR
125	Velocidad de obturación
F3,5	Valor de abertura
+2,0EV	Valor de exposición
C[1 [1] ●	Indicador del cuadro del visor de rango AF
1,0 m	Valor semimanual
<b>T</b>	Macro
GRABAR Espera	Grabación/modo en espera de una película
0:12	Tiempo de grabación (m (minuto) : s (segundo))
101-0012	Número de carpeta-archivo
2008 1 1 9:30 AM	Fecha/hora grabada en la imagen en reproducción
● STOP ● PLAY	Guía de función para reproducir imágenes

	Permiten seleccionar	
	imágenes	
<b>▼</b> VOLUME	Permite ajustar el volumen	

3	
<b>ਮੀ</b> 01	Carpeta de grabación
101Þ	Carpeta de reproducción
96	Número de imágenes grabables
8/8 12/12	Número de imagen/Número de imágenes grabadas en la carpeta seleccionada
00:25:05	Tiempo de grabación (h (hora) : m (minuto) : s (segundo))
	Grabación/reproducción de soportes ("Memory Stick Duo", memoria interna)
	Cambiar carpeta
iscn iscn <sup>+</sup> + ) む タン	Reconocimiento de escenas
<b>E</b> ON	Iluminador AF
<b>③</b>	Reducción del efecto ojos rojos
<b>()</b>	Modo de medición
4 4SL 3	Modo de flash
4.	Carga del flash
AWB ☀ ♣ ※ ※ ※ ☆	Balance de blancos
C:32:00	Visualización de autodiagnóstico
ISO400	Número ISO
+2,0EV	Valor de exposición
500	Velocidad de obturación
F3,5	Valor de abertura
D <sub>7</sub> D <sub>W</sub>	Objetivo de conversión

# 

<b>Ů</b> ₁0 <b>Ů</b> 2	Autodisparador					
C:32:00	Visualización de autodiagnóstico					
FULL	Base de datos llena					
	Cuadro del visor de rango AF					
+	Cruz filial de medición de foco					
<b></b>	Reproducción					
	Barra de reproducción					
	Histograma  •   aparece cuando la  visualización del  histograma está  desactivada.					

# Duración de la batería y capacidad de la memoria

# Duración de la batería y número de imágenes que se pueden grabar/ver

Los números que figuran en las siguientes tablas corresponden a la utilización de una batería completamente cargada

(suministrada) a una temperatura ambiente de 25 °C

Los números mostrados de imágenes que pueden grabarse o verse son aproximaciones y en ellos se tiene en cuenta el cambio de "Memory Stick Duo" según sea necesario.

Tenga en cuenta que es posible que el número real sea menor que el indicado en la tabla en función de las condiciones de uso.

### Cuando se toman imágenes fijas

Pantalla LCD	Duración de la batería (min)	N.° de imágenes		
Activada	Aprox. 150	Aprox. 300		
Apagada	Aprox. 170	Aprox. 340		

- Tomando imágenes en las siguientes situaciones:
  - [Modo Grabación] está ajustado en [Normal].
  - [Modo AF] está ajustado en [Sencillo].
  - [SteadyShot] está ajustado en [Tomando].
  - Tomando una imagen cada 30 s (segundo)
- Se cambia el zoom alternativamente entre los extremos W y T.
- El flash destella una de cada dos veces.
- La alimentación se activa y desactiva una de cada diez veces.
- El método de medición está basado en el estándar CIPA.
  - (CIPA: Camera & Imaging Products Association)
- El número de imágenes y la vida útil de la batería no cambian, independientemente del tamaño de la imagen.

### Cuando se ven imágenes fijas

Duración de la batería (min)	N.° de imágenes		
Aprox. 370	Aprox. 7400		

 Visualización de imágenes individuales en orden a intervalos de unos tres s (segundo)

#### Notas sobre la batería

- La capacidad de la batería disminuye con el uso y el paso del tiempo.
- El número de imágenes que se pueden grabar/ ver y la duración de la batería disminuyen en las condiciones siguientes:
  - La temperatura del entorno es baja.
  - El flash se utiliza frecuentemente.
  - La cámara ha sido encendida y apagada muchas veces.
  - El zoom es utilizado frecuentemente.
  - El brillo de la luz de fondo de la pantalla LCD está ajustado en un nivel alto.
  - [Modo AF] está ajustado en [Monitor].
  - [SteadyShot] está ajustado en [Continuo].
  - La batería tiene poca potencia.
  - La función de detección de cara está activada.

# Número de imágenes fijas que se pueden grabar y tiempo de grabación de películas

El número de imágenes fijas y la duración de las películas pueden variar en función de las condiciones de toma de imágenes.

- Aunque la capacidad del soporte de grabación sea la misma que la que figura en la siguiente tabla, es posible que el número de imágenes fijas y la duración de las películas sea diferente.
- Es posible seleccionar el tamaño de la imagen desde el menú (páginas 21, 22).

## Número aproximado de imágenes fijas que se pueden grabar

(Unidades: Imágenes)

Capacidad	Memoria interna	"Memory Stick Duo" formateado con la cámara						
Tamaño	Aprox. 15 MB	256 MB	512 MB	1 GB	2 GB	4 GB	8 GB	16 GB
13M	2	43	89	183	369	730	1468	2976
8M	4	72	149	306	618	1223	2457	4981
5M	6	92	190	390	786	1556	3127	6339
3M	10	148	305	625	1261	2497	5016	10169
VGA	96	1420	2932	6000	12102	23956	48138	97618
3:2 (12M)	3	48	100	205	414	821	1649	3343
16:9 (10M)	3	57	119	244	492	974	1957	3968
16:9 (2M)	16	236	489	1001	2018	3995	8025	16270

- El número de imágenes indicado corresponde a cuando [Modo Grabación] está ajustado en [Normal].
- Cuando el número de imágenes restantes que pueden tomarse es superior a 9 999, aparece el indicador ">9999".
- Cuando se reproduzcan en la cámara imágenes grabadas utilizando modelos Sony anteriores, es posible que las imágenes no aparezcan con su tamaño real.

### l Tiempo aproximado de grabación de películas

Los números que aparecen en la siguiente tabla muestran el tiempo máximo aproximado que es posible grabar obtenido mediante la suma de todos los archivos de películas. El tiempo máximo durante el que es posible grabar de manera continua es de aproximadamente 10 min (minuto).

(Unidades: h (hora): min (minuto): s (segundo))

Capacidad	Memoria interna	"Memory Stick Duo" formateado con la cámara						
Tamaño	Aprox. 15 MB	256 MB	512 MB	1 GB	2 GB	4 GB	8 GB	16 GB
640(Fina)	-	0:02:50	0:06:00	0:12:30	0:25:10	0:49:50	1:40:10	3:23:20
640(Estándar)	0:00:40	0:10:30	0:22:00	0:45:00	1:30:50	2:59:40	6:01:00	12:12:10
320	0:02:50	0:42:30	1:28:00	3:00:00	6:03:10	11:59:00	24:04:10	48:48:30

- Las películas con el tamaño ajustado en [640(Fina)] sólo pueden grabarse en un "Memory Stick PRO Duo".
- La cámara no es compatible con la grabación ni la reproducción de películas en formato HD (alta definición).

# Solución de problemas

Si tiene algún problema con la cámara, intente primero las siguientes soluciones.

 Compruebe los elementos siguientes y consulte "Guía práctica de Cyber-shot" (PDF).

Si aparece un código como "C/E:□□:□□" en la pantalla, consulte "Guía práctica de Cyber-shot".

- Extraiga la batería, espere aproximadamente un minuto, vuelva a insertarla y, a continuación, conecte la alimentación.
- 3 Inicialice los ajustes (página 20).
- Consulte con el distribuidor de Sony o con la oficina de servicio local autorizada de Sony.

Le rogamos que entienda que usted da su consentimiento a que el contenido de la memoria interna, incluidos los archivos de música, pueda ser comprobado cuando envía la cámara para repararla.

# Batería y alimentación

### No es posible insertar la batería.

 Inserte la batería correctamente de modo que ésta presione la palanca de expulsión de la batería (página 8).

### No es posible encender la cámara.

- Después de instalar la batería en la cámara, la cámara puede tardar cierto tiempo en encenderse.
- Inserte la batería correctamente (página 8).
- La batería está descargada. Inserte una batería cargada (página 7).
- La batería ha llegado al final de su vida útil. Reemplácela por una nueva.
- Utilice una de las baterías recomendadas.

### La alimentación se desconecta de repente.

- Si no utiliza la cámara durante unos tres min (minuto) mientras está conectada la alimentación, la cámara se apaga automáticamente para evitar que la batería se descargue. Encienda la cámara de nuevo (página 10).
- La batería ha llegado al final de su vida útil. Reemplácela por una nueva.

#### El indicador de batería restante es incorrecto.

- Este fenómeno ocurre cuando utiliza la cámara en un lugar muy cálido o muy frío.
- La carga de batería restante que se indica difiere de la actual. Descargue la batería totalmente y vuelva a cargarla para corregir la indicación.
- La batería está descargada. Inserte la batería cargada (página 7).
- La batería ha llegado al final de su vida útil. Reemplácela por una nueva.

### No es posible cargar la batería.

No es posible cargar la batería mediante el adaptador de alimentación de ca (no suministrado).
 Utilice el cargador (suministrado) para cargar la batería.

# Toma de imágenes fijas/películas

### La cámara no puede grabar imágenes.

- Compruebe la capacidad libre de la memoria interna o del "Memory Stick Duo" (página 30).
   Si están llenos, tome una de las siguientes medidas:
  - Borre las imágenes innecesarias (página 15).
  - Cambie el "Memory Stick Duo".
- No es posible grabar imágenes mientras se carga el flash.
- Cuando tome una imagen fija, ajuste el dial de modo en una posición distinta de 🖽.
- Ajuste el dial de modo en 🖽 cuando tome películas.
- El tamaño de imagen está ajustado en [640(Fina)] cuando está grabando películas. Realice uno de los procedimientos siguientes:
  - Ajuste el tamaño de imagen en uno distinto de [640(Fina)].
  - Inserte un "Memory Stick PRO Duo".

# Aparecen rayas verticales cuando se toma una fotografía de un objeto con mucha claridad.

 Esta ocurriendo el fenómeno de borrosidad de la imagen y aparecen en ésta rayas blancas, negras, rojas, moradas o de otro tipo. No se trata de un mal funcionamiento.

# Visualización de imágenes

### La cámara no puede reproducir imágenes.

- Pulse ► (Reproducción) (página 15).
- El nombre de la carpeta o del archivo ha sido modificado en el ordenador.
- Si se ha procesado un archivo de imagen con un ordenador o si se ha grabado el archivo de imagen con un modelo distinto al de la cámara, Sony no garantiza la reproducción en esta cámara.
- La cámara se encuentra en el modo USB. Elimine la conexión USB.
- No es posible efectuar la reproducción si el captador de sonrisas está en modo de espera. Pulse el botón de disparo hasta el fondo para salir del modo de espera.
- Esto se produce al copiar imágenes del ordenador en el "Memory Stick Duo" sin utilizar el "Picture Motion Browser". Reproduzca dichas imágenes en Ver carpetas (página 19).
- En ocasiones, un "Memory Stick Duo" que contiene imágenes tomadas mediante modelos de Sony anteriores no puede reproducirse. Reproduzca dichas imágenes en Ver carpetas (página 19).

# **Precauciones**

# No utilice/almacene la cámara en los siguientes lugares

 En lugares extremadamente calurosos, fríos o húmedos

En lugares tales como en un automóvil estacionado bajo el sol, es posible que el cuerpo de la cámara se deforme, lo que podría provocar un fallo de funcionamiento.

- Bajo la luz solar directa o cerca de una estufa El cuerpo de la cámara puede decolorarse o deformarse y esto puede ocasionar un fallo de funcionamiento.
- · En un lugar expuesto a vibración basculante
- Cerca de un lugar magnético intenso
- En lugares arenosos o polvorientos
   Procure que no entre arena o polvo en la cámara.
   Esto podría ocasionar un fallo de funcionamiento en la cámara que, en algunos

### I Transporte

No se siente con la cámara en el bolsillo posterior de los pantalones o de una falda, ya que podría causar un fallo de funcionamiento o daños en ésta.

# Acerca de la limpieza

casos, no podría repararse.

### Limpieza de la pantalla LCD

Limpie la superficie de la pantalla con un kit de limpieza para pantallas LCD (no suministrado) para eliminar huellas dactilares, polvo, etc.

#### Limpieza del objetivo

Limpie el objetivo con un paño suave para eliminar huellas dactilares, polvo, etc.

### Limpieza de la superficie de la cámara

Limpie la superficie de la cámara con un paño suave ligeramente humedecido con agua y, a continuación, pásele un paño seco. Para evitar dañar el acabado o la caja:

- No exponga la cámara a productos químicos tales como diluyente, bencina, alcohol, paños desechables, repelente de insectos, bronceador con filtro solar, insecticida, etc.
- No toque la cámara con las sustancias anteriores en la mano.
- No deje la cámara en contacto con objetos de goma o vinilo durante un tiempo prolongado.

# Acerca de la temperatura de funcionamiento

La cámara ha sido diseñada para utilizarse con temperaturas de entre 0  $^{\circ}$ C y 40  $^{\circ}$ C No se recomienda tomar imágenes en lugares extremadamente fríos o calurosos que excedan este rango.

# Acerca de la condensación de humedad

Si se traslada la cámara directamente de un lugar frío a uno cálido, es posible que se condense humedad en el interior o el exterior de la cámara. Esta condensación de humedad podría ocasionar un fallo de funcionamiento en la cámara.

#### Si se produce condensación de humedad

Apague la cámara y espere una hora aproximadamente hasta que la humedad se evapore. Tenga en cuenta que si intenta tomar imágenes cuando aún quede humedad en el interior del objetivo, no podrá grabar imágenes claras.

# Acerca de la batería interna recargable de reserva

La cámara tiene una batería interna recargable para mantener la fecha y la hora, así como otros ajustes independientemente de si la alimentación está conectada o desconectada.

Esta batería recargable se carga continuamente siempre que está utilizando la cámara. Sin embargo, si utiliza la cámara solamente durante períodos cortos, ésta se descargará gradualmente, y si no la utiliza en absoluto durante un mes, se descargará completamente. En este caso, asegúrese de cargar la batería recargable antes de utilizar la cámara.

Sin embargo, aunque la batería recargable no esté cargada, podrá utilizar la cámara siempre y cuando no grabe la fecha y la hora.

### Método de carga de la batería interna recargable de reserva

Inserte la batería cargada en la cámara y, a continuación, déjela apagada durante 24 h (hora) o más

# **Especificaciones**

#### Cámara

### [Sistema]

Dispositivo de imagen:

CCD de color de 9,29 mm (tipo 1/1,7), filtro de colores primarios

Número total de píxeles de la cámara: Aprox. 13,9 Megapíxeles

Número efectivo de píxeles de la cámara: Aprox. 13,6 Megapíxeles

#### Objetivo:

Carl Zeiss Objetivo Vario-Tessar con zoom de 3×

f = 7,6 - 22,8 mm (35 - 105 mm (equivalente a película de 35 mm) F2,8(W) - 5,5(T)

Control de exposición: Exposición automática, selección de escenas (10 modos)

Balance del blanco: automático, luz diurna, nublado, fluorescente 1,2,3, incandescente, flash, una pulsación

Balance del blanco submarino: automático, submarino 1,2, flash

Formato de archivo (compatible con DCF): Imágenes fijas: Exif Ver. 2,21, compatible con JPEG compatibles con DPOF Películas: compatible con MPEG1 (Monoaural)

Soportes de grabación: memoria interna (aprox. 15 MB), "Memory Stick Duo"

Flash: alcance de flash (Sensibilidad ISO (índice de exposición recomendado) ajustada en Auto):

Aprox. de 0,2 a 5,5 m (W)/aprox. de 0,4 a 2,8 m (T)

### [Conectores de entrada y salida]

Conector múltiple: Salida de vídeo

Salida de audio (monoaural) Comunicación USB

Comunicación USB: Hi-Speed USB (compatible con USB 2.0)

#### [Pantalla LCD]

Panel LCD: unidad de TFT de 6,7 cm (tipo 2,7 ) Número total de puntos: 230 400 (960 × 240) puntos

#### [Alimentación, general]

Alimentación: batería recargable NP-BG1, 3,6 V NP-FG1 (no suministrada), 3,6 V AC-LS5K adaptador de alimentación de ca (no suministrado), 4,2 V Consumo de energía (durante la toma de imágenes, pantalla LCD encendida): 1.4 W

Temperatura de funcionamiento: de 0 a 40°C Temperatura de almacenamiento: de -20 a +60°C

Dimensiones:  $94.3 \times 59.0 \times 26.8$  mm (an/al/prf, sin incluir las partes salientes)

Peso: aprox. 187 g (incluida la batería NP-BG1, la correa, etc.)

Micrófono: monouaral Altavoz: monoaural Exif Print: compatible

PRINT Image Matching III: compatible

PictBridge: compatible

### Cargador de baterías BC-CSGB/ BC-CSGC

Requisitos de alimentación: ca de 100 V a 240 V 50/60 Hz

2,6 W (BC-CSGB)/2 W (BC-CSGC)

Tensión de salida: cc de 4,2 V 0,25 A

Temperatura de funcionamiento: de 0 a  $40^{\circ}$ C Temperatura de almacenamiento: de -20 a  $+60^{\circ}$ C Dimensiones: aprox.  $62 \times 24 \times 91$  mm (an/al/prf) Peso: aprox. 75 g

# Batería recargable NP-BG1

Batería utilizada: batería de iones de litio Tensión máxima: cc 4,2 V Tensión nominal: cc 3,6 V

Capacidad: 3,4 Wh (960 mAh)

El diseño y las especificaciones están sujetos a cambios sin previo aviso.

### Marcas comerciales

- **Cyber-shot** y "Cyber-shot" son marcas comerciales de Sony Corporation.
- "Memory Stick", "Memory Stick PRO", MEMORY STICK PRO", "Memory Stick Duo", MEMORY STICK DUO, "Memory Stick PRO Duo", MEMORY STICK PRO DUO, "Memory Stick PRO-HG Duo", Memory Stick PRO-HG Duo", Memory Stick Micro", "MagicGate" y MAGICGATE son marcas comerciales de Sony Corporation.
- "PhotoTV HD" es una marca comercial de Sony Corporation.
- "InfoLITHIUM" es una marca comercial de Sony Corporation.
- Microsoft, Windows, DirectX y Windows Vista son marcas comerciales o marcas comerciales registradas de Microsoft Corporation en los Estados Unidos y/o en otros países.
- Macintosh, Mac OS, iMac, iBook, PowerBook, Power Mac y eMac son marcas comerciales o marcas comerciales registradas de Apple Inc.
- Intel, MMX, y Pentium son marcas comerciales o marcas comerciales registradas de Intel Corporation.
- Adobe y Reader son marcas comerciales o marcas comerciales registradas de Adobe Systems Incorporated en los Estados Unidos y/o en otros países.
- Además, los nombres de sistemas y productos utilizados en este manual son, en general, marcas comerciales o marcas comerciales registradas de sus respectivos programadores o fabricantes. Sin embargo, las marcas <sup>TM</sup> o ® no se utilizan en todos los casos en este manual.

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

En la página Web de atención al cliente puede encontrar información adicional sobre este producto y respuesta a las preguntas hechas con más frecuencia.

# http://www.sony.net/



Printed on 70% or more recycled paper using VOC eco (Volatile Organic Compound)-free vegetable oil based ink.

> Impreso en papel reciclado en un 70% o más utilizando tinta hecha con aceite vegetal exento de compuesto orgánico volátil (COV).



